



DIRECTIONS FOR REPLACING THE RED RUBBER STRIKER ON MINIPACK MVS CHAMBER VACUUM MACHINES

This is the rubber piece in the lid that the seal bar pushes against during the seal cycle.

1. **Remove old adhesive.** Rub it off with your thumb or use a readily available product called "Goo Off." DO NOT use mineral spirits!
2. **Clean lid with Acetone.** Wipe area where old striker was with a small amount of Acetone to remove any oil that could be there.
3. **Set new striker.** Remove backing (do not touch adhesive) and place with adhesive side up on seal bar. Use masking tape to hold both sides of striker to seal bar. Start vacuum cycle. Stop cycle by pushing "STOP" button when vacuum level reaches 55-60%. When lid is open finish seating striker by pushing against it with the palm of your hand.

The following list shows which striker goes on each MVS model. You will need one for each seal bar.

Part #	MVS Model
FM350200	MVS31, MVS41 (sides)
FM350201	MVS45, MVS45II, MVS45LII
FM350202	MVS48, MVS48DV
FM350203	MVS41 (front), MVS50
FM350204	MVS65